




USER GUIDE

DEAF ALERTER

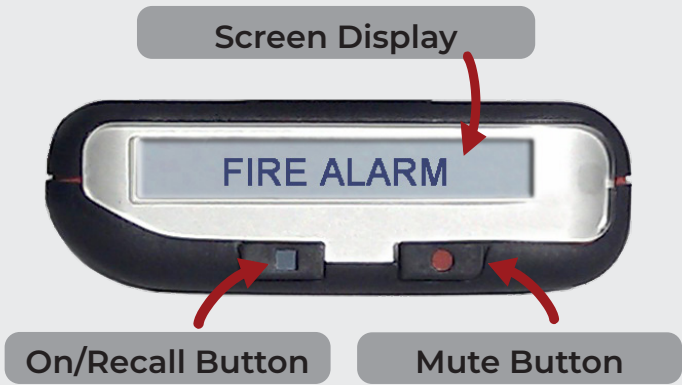

Starting your Alerter for the first time

When batteries are first inserted into the Alerter device, it will enter a self-test routine.

First, this routine will activate the LED, message Screen Display and vibration.

Then, the Screen Display will go blank – meaning the Alerter is in 'ready' mode.

Battery life/changing the battery

Battery life expectancy may vary depending on manufacturer.

If the battery in your Alerter needs changing, you'll be notified with a message that will appear on the Screen Display.

In this scenario, please contact the building owner/department that provided you with your Alerter.

It's important that the battery is changed as soon as possible after you've received this notification.

Video instructions

Prefer to watch these instructions in video format?

Scan this QR code



Who is this document for?

Anybody who has been issued with an Alerter device, and requires an understanding of how to use it.

For more information please contact the department that provided you with your Alerter device.

What is Deaf Alerter?



Deaf Alerter is a fire alarm messaging system for Deaf and Hard of Hearing people.

The Deaf Alerter system is installed in thousands of buildings across the UK.

It enables individuals within those buildings to receive emergency notifications via small portable devices.

These devices are known as 'Alerters'.



How does your Alerter work?

If you're in a building covered by the Deaf Alerter system, and the fire alarm goes off in that building, then a message will appear on the Screen Display of your Alerter (see illustration overleaf).

Your Alerter will vibrate strongly. The message on screen will tell you important information – so you should read it carefully.

High-priority messages sent to your Alerter device can't be cancelled manually, meaning **it will only stop vibrating if the alarm stops or when you leave the building.**

What buildings are covered?

Buildings covered by the Deaf Alerter system will have this symbol displayed on their entry doorway(s).



Your Alerter should always be kept switched on.

Wearing your Alerter

Your Alerter is designed to be worn using the clip supplied.

If you'd prefer, it can be worn with a lanyard.



DEAF ALERTER

a product by



www.alertergroup.com